




Einbau-Anleitung für Lukenverschluß 4491-000

1. Beim Einbau des Lukenverschlusses ist darauf zu achten, das der Abstand „A“, Oberkante-Gegenbeschlag zur Unterkante-Lukendeckel, zwischen $\frac{3}{8}$ " (9,5 mm) und $\frac{7}{8}$ " (22,2 mm) liegt.
2. Einbau-Abstand „B“ Basis-Lukenbeschlag zur Innenkante-Lukensüll ergibt sich aus der Tabelle.
3. Die Spitze der Verschluß-Spindel sollte bei leicht belasteter Lukendichtung in die Mitte der Bohrung des Gegenbeschlages ragen.



Installation Instruction Hatch latch 4491-000

1. Determine dimension "A". Best results can be obtained if between $\frac{3}{8}$ " and $\frac{7}{8}$ " (9,5 mm and 22,2 mm).
2. Determine dimension "B" from chart.
3. Attach hatch latch of frame using dimension "B" with number 10 fasteners.
4. Attach hatch latch stop to hatch opening riser using dimension "A" with number 10 fasteners.
5. For best results, the point of the hatch latch should be in the middle of the hatch latch stop when the gasket is slightly compressed.

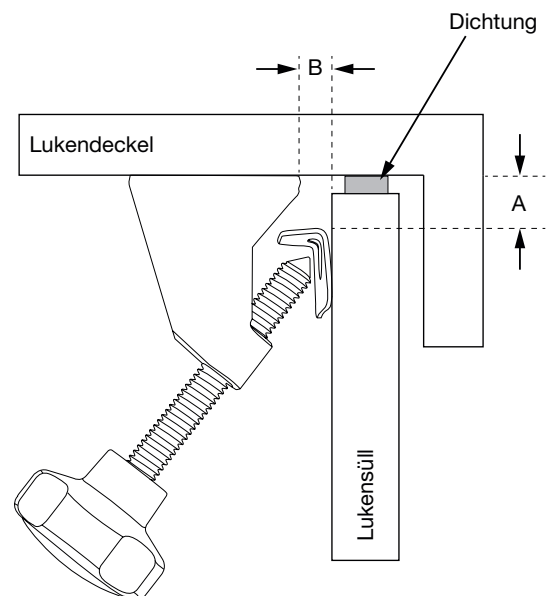

A	B
$\frac{3}{8}$ " 9,5 mm	$\frac{5}{8}$ " 15,9 mm
$\frac{1}{2}$ " 12,7 mm	$\frac{1}{2}$ " 12,7 mm
$\frac{5}{8}$ " 15,9 mm	$\frac{3}{8}$ " 9,5 mm
$\frac{3}{4}$ " 19 mm	$\frac{1}{4}$ " 6,4 mm
$\frac{7}{8}$ " 22,2 mm	$\frac{1}{8}$ " 3,2 mm